



TD600 Start Procedure

This procedure must be completed if the ambient outdoor air temperature is lower than 50° F. (10°C) And recommended to be initiated well in advance of firing.

1. Confirm that all breakers inside the driver side door are OFF (in the down position and that "PUMP" & "BURNER" switches are in the off (down) position.
2. Get the generator started. Turn the generator start key to the right but do not engage the starter. This will begin to energize preheater for the generator fuel. Repeating this step 3-4 times you can now crank the generator.
3. Once generator is running, you can now lay your grid for thawing. *(DO NOT TURN ON "PUMP" OR "BURNER" YET)*
(Use a minimum of 2 hoses on 2 separate male and female connections, and do not connect more than 2 hoses to each other.)
4. When the grid is laid out and "supply temperature gauge" reads between 80°-100°F you can now turn on all breakers and initiate the pump. (Switch in up position.)
5. When the fuel temperature gauge reaches 60°-70°F you can now activate the burner. (Switch in the up position.)

FOR ADDITIONAL ASSISTANCE PLEASE SEE MANUALS LOCATED NEAR HOSE REEL, SCAN QR CODE OR CALL 1-(219)-464-8818 (#3) FOR TECH SERVICE

